Crane

DESIGN FOR BETTER LIVING

CERAMIC TOWER HEATER

INSTRUCTION MANUAL

FOR THE FOLLOWING MODELS :

EE-7588R
EE-7588W
EE-7588O
EE-7588B
EE-7588M

PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE THE SAFE AND EFFCTIVE USE OF THIS APPLIANCE.

TABLE OF CONTENTS

Table of Contents, Heater Models	P. 1
Safety Instructions	P. 2-3
List of Main Parts, Technical Specifications	P. 4
Assembly, Operation and Use	P. 5-6
Maintenance, Troubleshooting	P. 7
Warranty	P. 8

HEATER MODELS

This instruction manual applies to the following models of the Ceramic Tower Heater product line:

Color	**Model #**
Red	EE-7588R
White	EE-7588W
Orange	EE-7588O
Black	EE-7588B
Mushroom	EE-7588M

For information about all CRANE products, please visit http://www.crane-usa.com.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical products, especially when children are present.

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.
CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE OUTLET SLOT AND FULLY INSERT.

WARNING! READ AND SAVE THESE INSTRUCTIONS. Failure to follow all of the instructions listed below may result in electric shock, fire and/or serious personal injury.

1. This product is intended for indoor, non-commercial, household use for temporarily heating residential rooms. Do not use the product for any other purpose.
2. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not in use.
3. Keep the product out of the reach of children and pets. This product is not intended for use by children.
4. Place the product on a flat, steady, stable, heat-resistant surface.
5. This product has hot parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored, as there may be a risk of fire or explosion.
6. Use the product in a well-ventilated area. This heater is hot when in use. To avoid burns, do not let bare skin touch a hot surface. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 feet (0.9 meters) from all sides of the heater.
7. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
8. Do not insert or allow foreign objects to enter any opening on the heater as this may cause an electric shock, fire, or product damage.
9. Do not use this product to dry or heat clothing, shoes, pipes, or any other item.
10. This heater is not intended for use in damp/wet locations.
11. Never locate heater where it may fall into a bathtub or other water container.
12. Do not move the product when it is heated. Allow the product to thoroughly cool before handling it.
13. Plug the product into a standard 120V AC electrical outlet.
14. Do not allow the Power Cord to hang (e.g., over the edge of a table or counter) or place/run the Power Cord under rugs, carpeting, or in high-traffic areas where it may be tripped over or pulled.
15. To disconnect the product, turn the controls to the off position, then remove the plug from the electrical outlet. Never pull on the Power Cord when disconnecting from power outlet.
16. Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
17. Do not plug or unplug the product from the electrical outlet with wet hands.
18. Keep the Power Cord and product away from heated surfaces.
19. Do not operate any heater with a damaged cord or plug, after the heater malfunctions, or has been dropped or damaged in any manner. Return the product to a service facility for examination, electrical or mechanical adjustment, or repair.

To prevent a possible fire, do not block heat in any manner. In order to avoid overheating, **do not** cover the heater. **Never** cover the top or bottom heat vents.

SAVE ALL INSTRUCTIONS!

GENERAL SAFETY INSTRUCTIONS

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the user that common sense and caution are a factor which cannot be built into this product, but must be supplied by the user.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.

SAVE ALL INSTRUCTIONS!

CAUTION: A short Power Supply Cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the extension cord must be (1) marked with an electrical rating of 125 V and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidently tripped over.

ELECTRIC POWER

If the electric circuit is overloaded by other appliances, your humidifier and/or appliances may not operate properly. The humidifier should be operated on a separate electrical circuit from other operating appliances.

POLARIZED PLUG

This humidifier has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAFETY WARNING

Although this appliance is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the appliance near a heat source.
2. Never leave the appliance unattended while connected to the electrical outlet.
3. To avoid any accidental burns, never place hand on top vent or side when the appliance is in operation.
4. Use the appliance on a stable surface away from water.
5. Do not unplug from the socket by pulling on the supply cord.
6. The appliance must be unplugged:
    A. Before any cleaning
    B. After use
    C. If it appears to be faulty

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

LIST OF MAIN PARTS

1. Front Base
2. Tower Heater
3. Power Supply Cord
4. 4 X Base Screws
5. Rear Base

TECHNICAL SPECIFICATIONS

Model Number	EE-7588
Rating Voltage	120 V, 60 Hz
Wattage	1500W

ASSEMBLY

1. Remove tie from power cord and unravel the power cord.
2. Connect the front base to the rear base by placing attached pegs into the appropriate holes.
3. Slide the power supply cord through the assembled base from the top. (Fig. 1)
4. Position the connected base pieces where the front base piece is facing in the direction of the front grill.
5. Move base so the screw holes align properly. Using the 4 base screws provided (taped to the Tower Heater), secure the base to the bottom of the Tower Heater. (Fig. 2)
6. Once the base is secured, unscrew one side of the cord holder on the bottom of the base. Place the power supply cord in the slot and replace the screw. The power supply cord should now fit in the groove on the back of the rear base. (Fig. 3)

CAUTION

Do not use your Tower Heater if it has not been fully assembled. Make sure that the screws that hold the base parts and the main unit together are tightened securely.

Fig.1

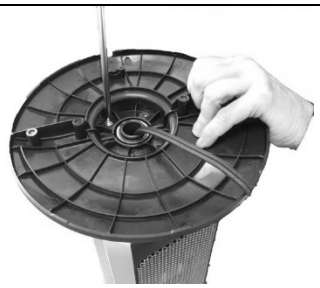

Fig.2

Fig.3

OPERATION AND USE

NOTE: During the first few minutes of initial use, you may notice a slight odor; this is normal and will quickly disappear.

CAUTION: ALWAYS USE CAUTION WHEN HANDLING THE TOWER HEATER. DO NOT DROP THE TOWER HEATER. DO NOT COVER THE VENTILATION GRILL.

Operating Instructions

1. The Tower Heater must be placed upon a firm, level surface.
2. Plug the power supply cord into an electrical outlet. Be sure plug fits tightly in outlet. A loose fit will cause overheating and damage the plug. Plug and cord set may feel warm during normal usage. Once plugged in, the power indicator light will illuminate.
3. When turned on, the indicator light will illuminate red. The red indicator light will remain lit until the control knob is turned off and the heater is unplugged from the electrical outlet.

NOTE: Avoid overloading your circuit by not using other high wattage appliances in the same outlet.

4. Rotate the control knob to the desired function.

OFF	✽	LO	HI
Off	Fan	Low heat mode	High heat mode

5. Turning the Oscillating Switch to the "ON" position will allow the Tower Heater to oscillate left and right. To stop the oscillation, turn the oscillating switch to the "OFF" position.
6. To turn the Tower Heater OFF, rotate the control knob to the "OFF" position, then remove the plug from the wall outlet.

SAFETY PROTECTION SYSTEMS

This Tower Heater has protection safeguards that shut off the Tower Heater hwne components become excessively hot.

IF OVERHEATED

- If the Tower Heater becomes overheated, it will shut OFF automatically.
- Remove any nearby objects that may be causing overheat conditions. Keep at least three feet of space on all sides of the Tower Heater to allow adequate air circulation.
- Use the Tower Heater in a well-ventilated area.
- Place the Tower Heater on a flat, smooth, stable surface.
- Unplug the Tower Heater from power outlet. Allow Tower Heater to completely cool then plug back into the electrical outlet.

MAINTENANCE

CAUTION:

Always be sure that the heater is switched OFF, unplugged and completely cooled before cleaning or attempting to store the item. The Tower Heater takes approximately 15-20 minutes to cool completely. Do not immerse heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.

CARE AND CLEANING

Allow the product to completely cool before handling, cleaning or storing.

- Use a soft, slightly damp cloth to clean the exterior enclosure.
- Never attempt to use gasoline, alcohol or chemical solvent to clean the Tower Heater.
- Store the Tower Heater in a clean, dry place when not in use.

Please Note: Regardless of the type of heating system setup, always install and maintain at least one smoke detector in good working condition on each floor of your home. Periodically check and/or replace the battery in your smoke detector with a fresh battery.

STORING

Store the Tower Heater in a dry location. Do not place any heavy items on top of item during storage as this may result in possible damage.

TROUBLESHOOTING

If your Tower Heater shuts off unexpectedly or fails to operate, the above-mentioned safety features may have activated to prevent overheating.

1. Be sure the power supply cord is plugged into a working electrical outlet.
2. The Tower Heater may be off because it has overheated. Unplug the Tower Heater and allow it to cool 15-20 minutes before plugging it back in and turning it ON.

ENVIRONMENTAL PROTECTION

If the heater should no longer operate, please be sure to dispose of the unit in an environmentally friendly way by taking it into a public collection point. Please do not place broken heaters with your regular household waste.

LIMITED WARRANTY

Thank you for purchasing a **Crane** product. This Ceramic Heater was tested and meets our stringent quality standards. This product is warrantied to be free from manufacturing defects under normal use and conditions for 1 year.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE. CALL US FOR PROBLEMS AND QUESTIONS. WE CAN HELP.

If you experience unsatisfactory operation, first refer to the troubleshooting section in the manual to ensure that it is not due to care or cleaning. Follow Care and Cleaning Instructions from manual. You can also visit www.crane-usa.com Customer Care for information.

If you have any questions or comments, please call Crane Customer Care, Toll Free: 888-599-0992 or Email customer-service@crane-usa.com. Please specify the style and model number so our Customer Care Department can assist you.

WARRANTY REQUIRES A DATED PROOF OF PURCHASE.

This warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons, or a failure to follow operating instructions provided with the product. This warranty does not apply to normal wear and tear or commercial use.

The warranty is non-transferable and applies only to the original purchaser and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair or replacement. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss - direct, indirect or incidental – or consequential damage arising out of, or in connection with the use of this product.

This warranty is valid only in the 48 contiguous states plus the District of Columbia and excludes Puerto Rico and the Virgin Islands. This warranty is effective only if the product is purchased and operated in the United States of America.

This warranty gives you specific legal rights; however you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages; therefore these restrictions may not apply to you.

Any instructions or warranty included in this manual may be subject to change without notice. For the most up-to-date instructions and warranty information, please contact us or visit our website.

To receive warranty instructions and return authorization, please call or email Crane Customer Care.

Crane USA, Inc.
621 Route 83, Ste 202, Bensenville, Illinois 60106
Toll Free: 1-888-599-0992 (Monday - Friday 9:00am - 4:00pm CST)
Email: customer-service@crane-usa.com
Website: http://www.crane-usa.com

CRANE WARRANTY